



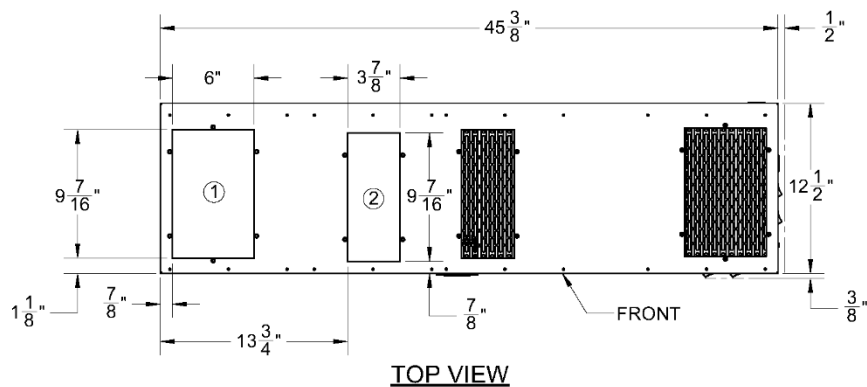



- ① RETURN AIR INTAKE - BOTTOM
- ② COLD AIR EXHAUST - BOTTOM

3400H ABOVE CELLAR COLD AIR CUTOUT DIMENSIONS

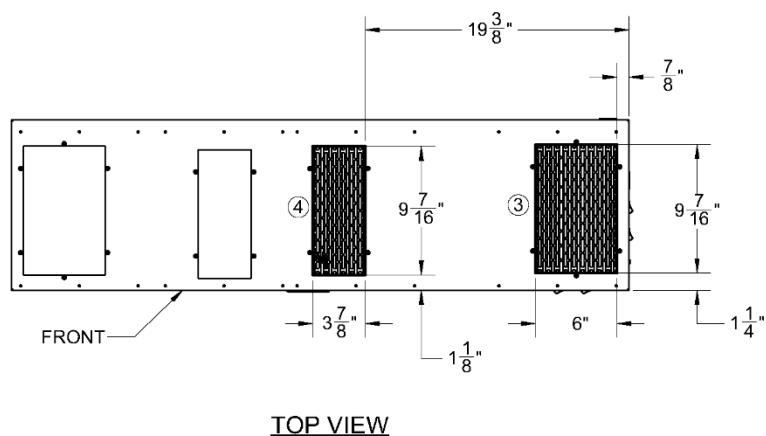

- ③ FRESH AIR INTAKE - TOP
- ④ HOT AIR EXHAUST - TOP

3400H INSIDE CELLAR HOT AIR CUTOUT DIMENSIONS

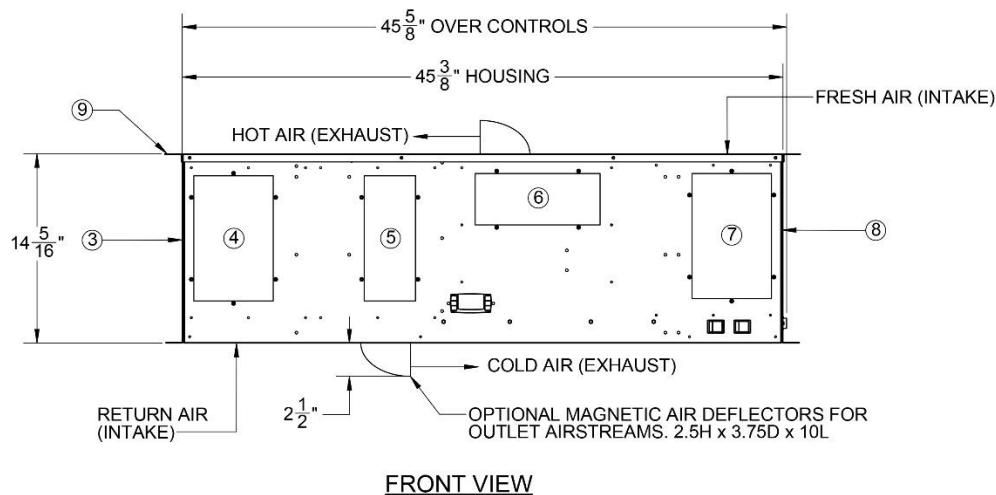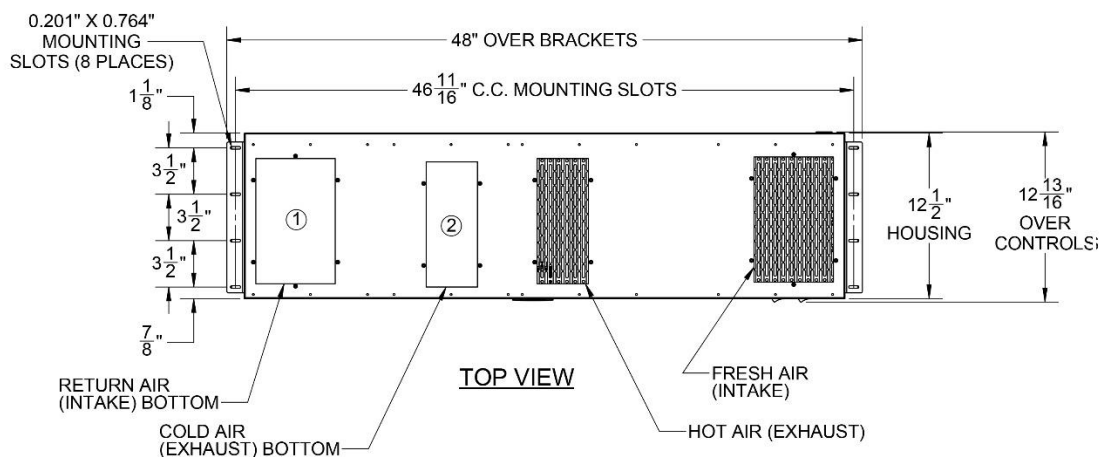

NOTES:

1. ALTERNATE RETURN AIR (INTAKE) - TOP
2. ALTERNATE COLD AIR (EXHAUST) - TOP
3. ALTERNATE RETURN AIR (INTAKE) - LEFT END
4. ALTERNATE RETURN AIR (INTAKE) - FRONT*
5. ALTERNATE COLD AIR (EXHAUST) - FRONT*
6. ALTERNATE HOT AIR (EXHAUST) - FRONT* AND REAR OPTIONS
7. ALTERNATE FRESH AIR (INTAKE) - FRONT*
8. ALTERNATE FRESH AIR (INTAKE) - RIGHT END
9. TWO MOUNTING BRACKETS SHIP LOOSE WITH UNIT. UNIT HAS MOUNTING BRACKET HOLES FOR INSIDE CELLAR OR ABOVE CELLAR MOUNTING. REFER TO THROUGH CEILING MOUNTING DIAGRAM FOR OTHER MOUNTING OPTIONS

* THE FRONT GRILL MUST BE REMOVED IF USING FRONT VENT OPTIONS. REPLACE ALL SCREWS AFTER REMOVING GRILL.

3400H OVERALL DIMENSIONS AND AIR VENT LOCATIONS

2752A_R00